 


**TX6U**  
**Wireless 433 MHz**  
**Temperature Sensor/Transmitter**

**Instruction Manual**

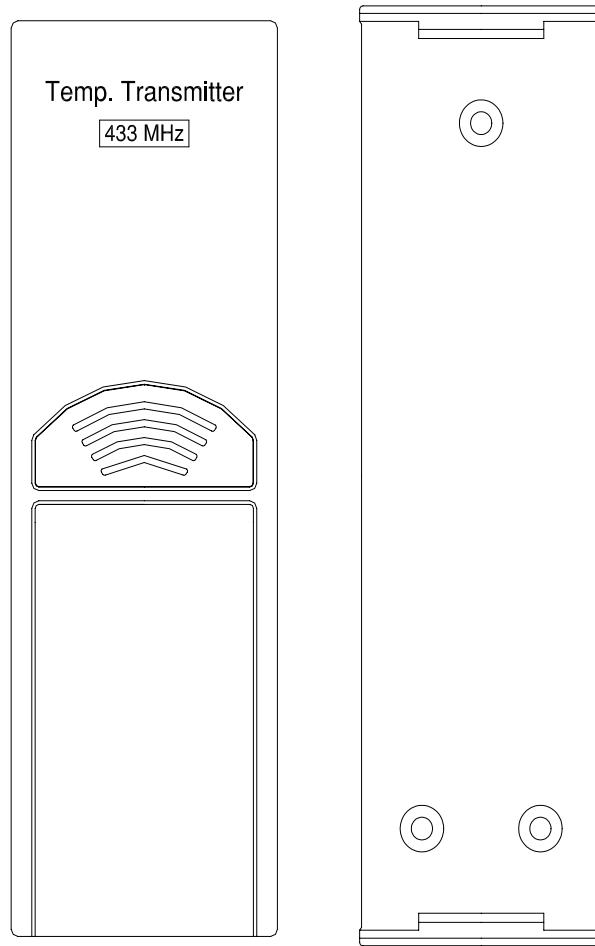

**LA CROSSE** *tools and technology*  
**TECHNOLOGY** *for home and office*

## QUICK SET-UP GUIDE

**Hint: Use good quality Alkaline Batteries and avoid rechargeable batteries.**

1. Have the indoor station and outdoor remote 3 to 5 feet apart.
2. Batteries should be out of both units for 10 minutes.
3. Place the batteries into the **outdoor remote** first then into the indoor station.  
(All outdoor remotes must be started before the indoor station)
4. **DO NOT PRESS ANY BUTTONS FOR 10 MINUTES.**

 
In this time the display and sensor will start to talk to each other and the display will show both the indoor temperature and an outdoor temperature. If the station does not display both temperatures after the 10 minutes please retry the set up as stated above. After both indoor and outdoor temperatures are displayed for 10 minutes you can place your sensor outdoors and set your time.

The remote sensor should be placed in a dry, shaded area. The remote sensor has a range of 80 feet. Any walls that the signal will have to pass through will reduce distance. An outdoor wall or window will have 20 to 30 feet of resistance and an interior wall will have 10 to 20 feet of resistance. Your distance plus resistance should not exceed 80 ft. in a straight line.

**NOTE:** Fog and mist will not harm your remote sensor but direct rain must be avoided.

### Battery Installation:

1. Remove the mounting bracket. The bracket snaps on and off easily.
2. Remove the battery cover, by sliding the cover down.
3. Observing the correct polarity install 2 AA batteries. The batteries will fit tightly (to avoid start-up problems make sure they do not spring free).
4. Replace the battery cover by sliding upwards. Be sure battery cover is on securely.

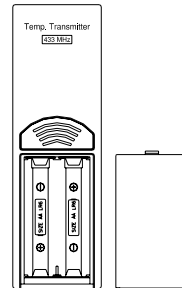


## MOUNTING THE REMOTE TEMPERATURE SENSOR/TRANSMITTER

The remote temperature sensor/transmitter can be mounted in two ways:

- with the use of screws, or
- using the adhesive tape.

### A. MOUNTING WITH SCREWS

 - 1) Remove the mounting bracket from the remote temperature sensor/transmitter.
- 2) Place the mounting bracket over the desired location. Through the three screw holes of the bracket, mark the mounting surface with a pencil.
- 3) Where marked, start the screw holes into mounting surface.
- 4) Screw mounting bracket onto the mounting surface. Ensure that the screws are flush with the bracket.

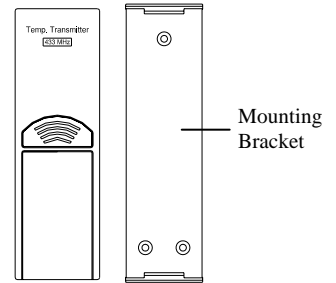

### B. MOUNTING WITH ADHESIVE TAPE

- 1) With a nonabrasive solution, clean and dry the back of the mounting bracket and the mounting surface to ensure a secure hold. The mounting surface should be smooth and flat.
- 2) Remove the protective strip from one side of the tape. Adhere the tape to the designated area on the back of the mounting bracket.
- 3) Remove the protective strip from the other side of the tape. Position the remote temperature sensor/transmitter in the desired location, ensuring that the weather station can receive the signal.

## SPECIFICATIONS

<b>Temperature measuring range:</b>	
Outdoor:	-21.8°F to 157.2°F with 0.2°F resolution. (-29.9°C to 69.9°C resolution) “OFL” displayed if outside this range
Outdoor temperature checking interval (remote temperature sensor/transmitter):	Every 1 minute
Transmission Range:	80 feet (in open space)
<b>Power Supply:</b>	
Temperature sensor/transmitter:	2 x AA, IEC LR6, 1.5V
Battery life cycle:	Approximately 12 months
Recommended battery type:	Alkaline
<b>Dimensions (L x W x H)</b>	
Temperature sensor/transmitter:	1.57“ x 0.9“ x 5.04“ (40 x 23 x 128 mm)

## WARRANTY INFORMATION

La Crosse Technology, Ltd provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty service, the purchaser must contact La Crosse Technology, Ltd for problem determination and service procedures. Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center.

La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of La Crosse Technology, Ltd and must be returned to La Crosse Technology, Ltd. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer. La Crosse Technology, Ltd will pay all expenses for labor and materials for all repairs covered by this warranty. If necessary repairs are not covered by this warranty, or if a product is examined which is not in need or repair, you will be charged for the repairs or examination. The owner must pay any shipping charges incurred in getting your La Crosse Technology, Ltd product to a La Crosse Technology, Ltd authorized service center. La Crosse Technology, Ltd will pay ground return shipping charges to the owner of the product to a USA address only.

Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the products inability to receive a signal due to any source of interference.. This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH.

This warranty gives you specific legal rights. You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you.

For warranty work, technical support, or information contact:

La Crosse Technology, Ltd  
2809 Losey Blvd S.  
La Crosse, WI 54601  
Phone: 608.782.1610  
Fax: 608.796.1020

e-mail:

[support@lacrossetechnology.com](mailto:support@lacrossetechnology.com)  
(warranty work)

[sales@lacrossetechnology.com](mailto:sales@lacrossetechnology.com)  
(information on other products)

web:

[www.lacrossetechnology.com](http://www.lacrossetechnology.com)

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.

All trademarks and patents are acknowledged.

**FCC ID: OMO-01TX**

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:**

- 1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND**
- 2. THIS DEVICE MUST ACCEPT INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.**